

Warnings

- Read all instructions and warnings before using this product. Improper use of this product may result in product damage, excessive heat, toxic fumes, fire or explosion, for which damages you ("Purchaser") and not Wave Audio ("Manufacturer") are responsible.
- Do not store the accessory in a high-temperature environment, including heat caused by intense sunlight or other forms of heat (heaters etc.).
- Do not place the device in fire or other extremely hot environments.
- Do not disassemble or modify this accessory in any manner.
- Do not attempt to power this device using any other method than as instructed explicitly in this user guide.
- This accessory is intended for adults and not minors. Failure not to follow these warnings is the sole responsibility of the purchaser, who agrees to indemnify the Manufacturer ("Wave Audio") for any unintended use/misuse by a minor.
- All products must pass through a thorough quality inspection at the time of manufacture. However, if you find that your device is excessively hot, is found to be deformed outside its regular appearance or is emitting smoke, immediately stop using the device and contact Wave Audio.




USER MANUAL

3S-2026

3S-2027



MADE IN CHINA
©2021 3sixT. All rights reserved.
23/136 Keys Road, Cheltenham VIC 3192 Australia.

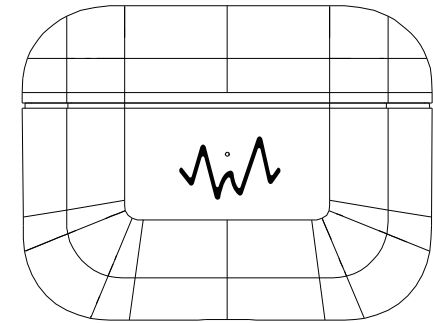

Product specification

BT Version: V5.0
Effective BT Range: 10M/33FT
Sound Outlet: 13mm
Driver Size: 6mm
Impedance: 32Ω +/- 15%
Driver Sensitivity: 107dB±3dB
Microphone Sensitivity: -32dB ±3dB
Frequency Response: 20Hz - 20KHz
Playing time: Approx. 4 hours
Battery Capacity (Earbud/Case):
30mAh ea./300mAh
Weight (Earbud/Case): 3g ea./30g

Included Item List

X1 Charging Case
X2 Earbuds
X1 Set of Silicone Earbud Guides
(for increased sound isolation and/or better fitment during physical activity)
X1 User Guide
X1 Warranty Guide
X1 USB-C Charging Cable



Operating Instructions

Charging the Earbuds

Remove the earbuds from the packaging, flip up the charging case top and place respective earbuds into each side of the charging case. The charging case LED will light up green when charging up and extinguish when earbud charging is complete.

Charging the Charge Case

Plug the charging case in via the included USB-C cable. When charging up the LED on the case will flash red. Once charging has completed the red flashing LED will extinguish and stay on.

Activating the Earbuds

Flip open the charging case to expose the earbuds. This will activate the earbuds and set them into TWS pairing mode.

Pairing to a Device

Open your devices Bluetooth setting and search for: "Wave 3S-2026" or "Wave 3S-2027". Earbuds will auto pair.

Answering Calls

Click either side earbud once on the touch pad which is situated on the main stems.

Rejecting Calls

Long press (2 seconds) either earbuds touch pad which is situated on the main stems.

Hang Up

Click either side earbud once on the touch pad which is situated on the main stems.

Pause/Play

While playing music click either side earbud once on the touch pad which is situated on the main stems.

Skip Forward/Back

Double click (2 times) right earbud on touch pad to skip forward. Double click (2 times) left earbud on the touch pad to skip back.

Device Assistant

Press either earbud three times (3) to activate your devices assistant.